

Bearing maintenance procedure for Makita motor

Unscrew and remove bolt, outer flange, cutting blade (1 & 2) and inner flange no.3. Generously apply marine grease around bearing retainer to protect the main bearing from the moisture. This procedure should be performed after each use. Failure to follow this procedure shall void 1 year motor warranty.

